
User Preferences

Default Parameters

The scanner can be reset to two types of defaults: factory defaults or custom defaults. Scan the appropriate bar code below to reset the scanner to its default settings and/or set the scanner's current settings as the custom default.

- **Restore Defaults** - Scan this bar code to reset all default parameters as follows:
 - If you configured custom default values (see **Write to Custom Defaults**), this sets the custom default values for all parameters.
 - If you did not configure custom default values, this sets the factory default values for all parameters. (For factory default values, see *Table A-1 on page A-1*.)
- **Set Factory Defaults** - Scan this bar code to eliminate all custom default values and set the scanner to factory default values. (For factory default values, see *Table A-1 on page A-1*.)
- **Write to Custom Defaults** - This bar code configures custom default parameters that set unique default values for all parameters. After changing all parameters to the desired default values, scan the **Write to Custom Defaults** bar code below to configure custom defaults.



NOTE Scanning **Restore Defaults** or **Set Factory Defaults** unpairs the scanner with the cradle, and you must rescan the pairing bar code.



*Restore Defaults



Set Factory Defaults



Write to Custom Defaults